



**ULTRATECH**  
INTERNATIONAL, INC.

# Ultra-Containment Berm® Foam Wall Plus Models



Versatile spill containment berm uses replaceable foam supports to minimize service and maintenance

- + Flexible containment berm uses foam supports for sidewall structure - allows for true “drive-in/drive-out” applications.
- + Removable supports are quickly and easily replaced if necessary - eliminates maintenance downtime.
- + Compact when folded (with inserts removed) for more effective and more economical shipping and storage.
- + Heavy-duty materials withstand harsh conditions and chemical exposure.
- + Built-in handles help with transport and placement.
- + Custom colored foam inserts available for easy identification or company branding. Please contact us for details.
- + Helps meet SPCC and EPA Container Storage Regulation 40 CFR 264.175 Spill Containment Regulations.



8966

8965

*Foam pieces easily slide into the sleeves of the berm*

Copolymer 2000™ Part#	PVC 22 oz. Part#	Dimensions ft. (m) Wall Height: 4 in. (102 mm)	Containment Capacity gal. (L)	Copolymer 2000™ Weight lbs. (kg)	PVC 22 oz. Weight lbs. (kg)
8950	8958	4 x 4 (1.2 x 1.2)	39 (148)	35 (16)	20 (9)
8951	8959	10 x 10 (3.0 x 3.0)	249 (943)	65 (29)	65 (29)
8952	8960	10 x 20 (3.0 x 6.1)	498 (1,885)	210 (95)	210 (95)
8953	8961	10 x 30 (3.0 x 9.1)	748 (2,831)	220 (100)	220 (100)
8954	8962	10 x 50 (3.0 x 15.2)	1246 (4,716)	255 (116)	240 (109)
8955	8963	12 x 20 (3.7 x 6.1)	598 (2,263)	235 (107)	220 (100)
8956	8964	12 x 30 (3.7 x 9.1)	897 (3,396)	245 (111)	230 (104)
8957	8965	12 x 50 (3.7 x 15.2)	1,496 (5,663)	265 (120)	250 (113)
Part#	Description	Dimensions in. (mm)	Weight lbs. (kg)		
8966	Replacement Foam - 4' - 20 MIL PVC	48 x 4 x 4 (1,219 x 102 x 102)	1 (0.5)		
8967	Replacement Foam - 6' - 20 MIL PVC	72 x 4 x 4 (1,829 x 102 x 102)	2 (1)		



# Ultra-Containment Berm® Foam Wall Plus Models Setup Instructions

## POSITIONING & PREPARATION

1. Bring palletized Berm to site where it will be deployed.
2. Check area for any debris (rocks, sticks, holes) that may damage the Berm when weight from vehicles, drums, equipment is added.
3. If possible/practical sweep area before deploying the Berm.



## INSPECTION

1. Unroll Berm and inspect liner and Foam Supports for any damage that may have been caused during shipping. Please contact UltraTech immediately so that a claim can be filed with the freight company.



## DEPLOYMENT

1. If no damage is found, complete unrolling Berm (if necessary) and position it as needed.
2. Depending on the size, the Ultra-Foam Wall Plus Berm may be shipped with some of the Foam Wall Supports pre-installed and others separate. If needed, install remaining Foam Wall Supports. HINT: String or rope (not included) can be tied to grommets if pulling the Supports is preferred.
3. The Ultra-Foam Wall Plus Berm is now ready to be used.

