



ULTRATECH
INTERNATIONAL, INC.

Ultra-Gutter Guard Plus®

INSTALLATION INSTRUCTIONS



STEP 1: Remove GutterGuard Plus grids and sleeves from box (6-foot unit shown).



STEP 2: Snap off stabilizer arms (2-pieces per arm). Set aside for step 5.



STEP 3: Slide grids together.



STEP 4: Slide assembled grids into outer sleeve.



STEP 5: Install stabilizer arms (correct side is noted on grids)

STEP 6: Seal hook & loop fastener strips.



STEP 7: Insert 7 lb. minimum weight into sleeve in back of unit. (Optional weight available - p/n 9148)

STEP 8: Slide sleeve into curb throat, holding unit tight to curb face. (Leave 12" overlap on each end of curb opening)

STEP 9: Tie-back straps can be used for additional anchoring if desired.

STEP 10: Clean unit after each wet weather event.



OTHER PRODUCTS AVAILABLE FROM ULTRATECH
VISIT www.spillcontainment.com FOR MORE INFORMATION



ULTRATECH
INTERNATIONAL, INC.


UltraTech International, Inc. · 11542 Davis Creek Court, Jacksonville, Florida 32256 USA
(800) 353-1611 · 1-904-292-1611 · spillcontainment.com



ULTRATECH
INTERNATIONAL, INC

Ultra-Gutter Guard Plus® Specifications

Part#	9151, 9154, 9158, 9159
Dimensions In. (mm)	9151: 6' L x 6" H (1,829 x 152 mm) 9158: 9' L x 6" H (2,742 x 152 mm) 9154: 12' L x 6" H (3,658 x 152 mm) 9159: 15' L x 6" H (4,572 x 152 mm)
Weight lb. (kg)	9151: 10.0 lb. (4.5 kg) 9158: 13.0 lb. (6.0 kg) 9154: 16.0 lb. (7.0 kg) 9159: 20.0 lb. (9.0 kg)
Color	Yellow
Construction	Polypropylene
Compliance	Helps comply with NPDES, 40 CFR 122.26 (1999) and TMDL requirements.

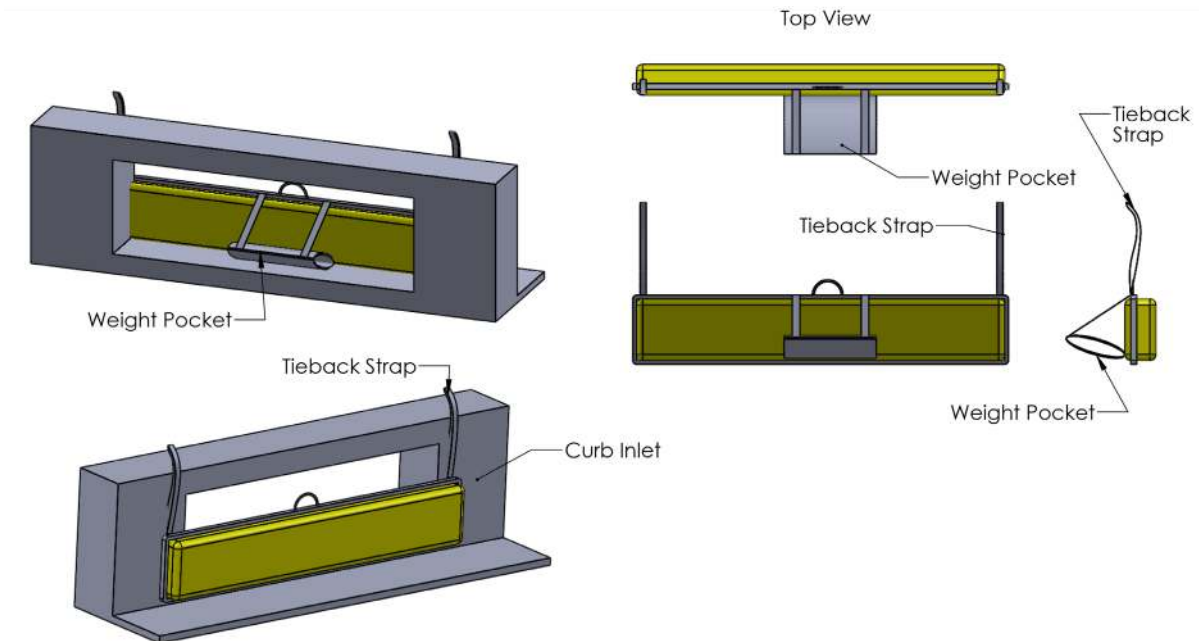

Ultra-Gutter Guard Plus™ General Specification

For Curb Inlet Storm Drains

1.0 Description:

1.1 This work shall consist of furnishing, placing, maintaining and removing the Gutter Guard Plus sediment control device as directed by the engineer and as shown on the contract drawings

2.0 Material:

2.1 Gutter Guard Plus

The Ultra-Gutter Guard Plus will be manufactured to 3' molds in 6', 9', 12', 15' and 18' lengths and a minimum of twenty-four (24) inches longer than the curb inlet opening. This will allow for sufficient length to cover the inlet with twelve (12) inches beyond the inlet on both ends.

3.0 Construction Sequence:

3.1 General

3.1.1. Install the Gutter Guard Plus in front of the curb inlet opening. Drop 7lb weight sock into inlet opening, secure tie back straps, if applicable. Each end of the Gutter Guard Plus should overlap the curb inlet approximately 12".

3.1.2 The Gutter Guard Plus should be cleaned if a visual inspection shows sediment and debris build up around the Gutter Guard Plus.

3.1.3 To remove the Gutter Guard Plus, lift out of curb opening with provided carrying handle.

3.1.4 Clean as needed. Store out of direct sunlight.